



Remote Control Setting	Button	Remarks																												
	ON/OFF	Press the "ON/OFF" button, the load light enters the normal on/off mode, and the sensing function is disabled. In the normal on/off mode, the "DIM+/DIM-" function can be used to maintain the load light brightness after powering on again. In the normal on/off mode, the load light enter ON after powering on again.																												
	Reset	Press "Reset" button, all parameters are same as setting of DIP switch or factory settings. Note: Only the product has DIP switch, it will revert to the current DIP setting.																												
	Sensor motion	Press "Sensor motion" button, the light quits from the normal on/off mode, and the sensor starts to work. (The latest setting stays in validity)																												
	DIM Test	Press "DIM Test" button, the 0-10V dimming works to test whether the 1-10Vdc dimming ports are connected properly. After 2s, it returns to the latest setting automatically.																												
	Override DH	Long Press 3s "Override DH" button to exit the Daylight priority mode or Daylight harvesting mode, and then enter the Daylight Sensor mode. (The latest setting stays in validity)																												
	DIM+ DIM-	Short press "DIM+/DIM-" button to set occupancy light level, the brightness of the load light adjusts at 5% per unit. Long press "DIM+/DIM-" button to set occupancy light level, the brightness of the load light adjusts at 5% per unit. Dimming range: 50%-100%. (apply for normal on mode and sensor with daylight harvesting function)																												
	DH Mode	Long Press 3s to enter the Daylight priority function or Daylight harvesting function. Note: Short press "Disable" button will exit the Daylight priority mode and the Daylight Sensor is uncontrolled.																												
	Q51 Q52 Q53	<table border="1"> <thead> <tr> <th>Scene Options</th> <th>Detection Area</th> <th>Hold Time</th> <th>Stand-by period</th> <th>Stand-by dim level</th> <th>Daylight Sensor</th> <th>Induction way</th> </tr> </thead> <tbody> <tr> <td>Q51</td> <td>100%</td> <td>5min</td> <td>10min</td> <td>10%</td> <td>30Lux</td> <td>HS</td> </tr> <tr> <td>Q52</td> <td>100%</td> <td>10min</td> <td>30min</td> <td>10%</td> <td>Disable</td> <td>HS</td> </tr> <tr> <td>Q53</td> <td>100%</td> <td>20min</td> <td>30min</td> <td>10%</td> <td>Disable</td> <td>HS</td> </tr> </tbody> </table> <p>Note: The sensor parameters can be adjusted by pressing the corresponding button. When user press any button to change the sensor parameters, the last setting prevails. If the sensor doesn't have the function of the above parameters, that parameter is invalid. (Stand-by period and Stand-by DIM Level are not applicable to ON-OFF Sensor. Induction way is not applicable to low-mount sensor)</p>	Scene Options	Detection Area	Hold Time	Stand-by period	Stand-by dim level	Daylight Sensor	Induction way	Q51	100%	5min	10min	10%	30Lux	HS	Q52	100%	10min	30min	10%	Disable	HS	Q53	100%	20min	30min	10%	Disable	HS
Scene Options	Detection Area	Hold Time	Stand-by period	Stand-by dim level	Daylight Sensor	Induction way																								
Q51	100%	5min	10min	10%	30Lux	HS																								
Q52	100%	10min	30min	10%	Disable	HS																								
Q53	100%	20min	30min	10%	Disable	HS																								
	TEST 2s	Press the "TEST 2s" button can enter the test mode anytime. At test mode, the sensor parameters as below: Detection Area is 100%, Hold Time is 2s, Stand-by Dim Level is 10%, Stand-by Period is 0s. Daylight sensor is disabled. This function only for testing. Quit the test mode by pressing "RESET" or any other function buttons. This mode has no memory function. After powering on again, the parameters are restored to the last setting. Note: If the sensor have the wireless networking function, the button provides the functions is entering the distribution network mode.																												
	HS LS	Press "HS" button to set the detection area to high sensitivity. Press "LS" button to set the detection area to low sensitivity. The Induction mode is adjusted at the setting detection area. Note: This button is invalid for low-mount sensor.																												
	Daylight Sensor	Set up Daylight Sensor: 5Lux/15Lux/30Lux/50Lux/100Lux/150Lux/Disable																												
	Stand-by period	Set up Stand-by period: 0s/10s/1min/3min/5min/10min/30min/+∞ Note: Stand-by period is not applicable to ON-OFF Sensor.																												
	Hold time	Set up Hold time: 5s/30s/1min/3min/5min/10min/20min/30min																												
	Stand-by dim level	Set up stand-by dim level: 10%/20%/30%/50% Note: Stand-by DIM Level is not applicable to ON-OFF Sensor.																												
	Detection Area	Set up Detection Area: 25%/50%/75%/100%																												
	Remote Distance	Toggle bottom can set the remote distance of remote control and sensor.																												

Remote control and code setting conversion

1. DIP switch setting convert to remote control

Press any button except "RESET" on the remote control, and the sensor settings convert to the function currently selected by the remote control. (No function button settings invalid)

2. remote control convert to DIP switch setting

a. Press the "RESET" button on the remote control, and all settings return to the DIP switch settings of the sensor.

b. Turn off the power, toggle any DIP switch, connect to the power, and all settings return to the DIP switch settings when supply power again.

Unique design of infrared transmitting device

